



Loader Center pin repair kit

Our unique 2-pc bar kit makes those center pin bore repair jobs much easier!

Order #K95.50



P/N 9210 (alignment key)

Bar P/N 9608



Bar P/N 9607

P/N 5365 (joiner screw)(6)

P/N 5271 (tool screw)(8)




Assembly instructions:

1. Remove bars (#9608 and 9607) from storage tube



2. Couple the bars together as shown, with keyways in each bar aligned with one another.

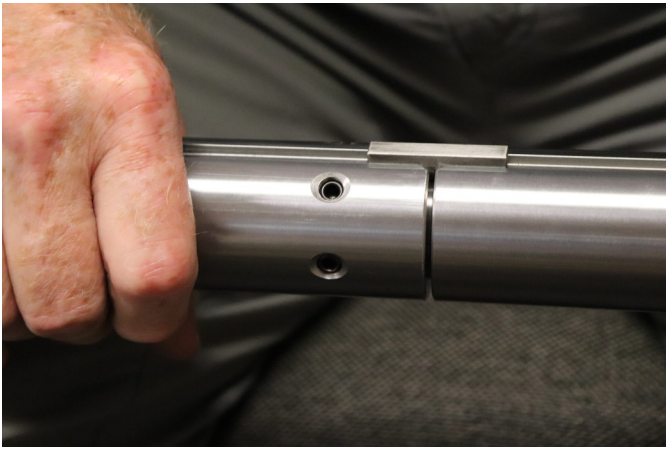

3. Install the included 1/4" alignment key (#9010) as shown and rotate the bars as needed so key can be fully inserted into the keyway. This will align keys properly for easy installation into BOA-C45 drive.



4. Tighten the (6) coupler screws (#5365) evenly to approximately 100 in/lbs (11.3 N/M) *Note: We recommend tightening screws in a cross pattern to ensure perfect alignment coupling of both bars.*

Once all (6) screws are tight, your bar is ready for use.

While not mandatory, we recommend for best results each bar section should be supported by either two support bearings or one support bearing and the BOA-C45 drive. Our product testing yielded best results with two supports (or more) per bar section.

Shown to the right is the #K94.22 additional inline support bracket. A pair of these coupled to your one arm supports #K94.30 works well. This assembly is low profile and provides good support for each bar section.

